



5885424

K-Freestyle Lamp


Parts List

A.	Harp	1 pc
B.	Socket Assembly	1 pc
C.	Shade	1 pc
D.	Finial	1 pc

- * Please make sure that you have all the parts indicated above before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.

Assembly Instructions

1. **Attach Harp (A)** Insert the Harp (A) into the saddle of Socket Assembly (B). See illustration.
2. **Attach Shade (C)** Remove the Finial (D) from the Harp (A). Place Shade (C) on Harp (A) and secure with Finial (D). See Illustration.

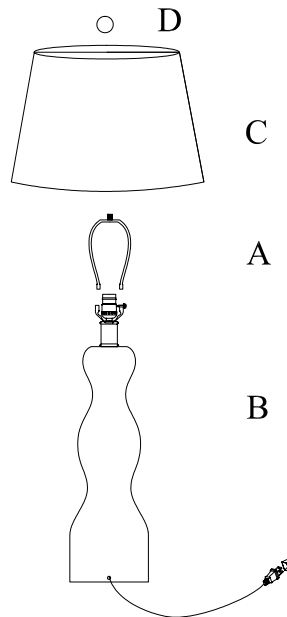

Illustration

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature this plug will fit in a polarized outlet in only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted, do not attempt to defeat this safety feature.